C-HDM-176
INSTALLATION INSTRUCTIONS

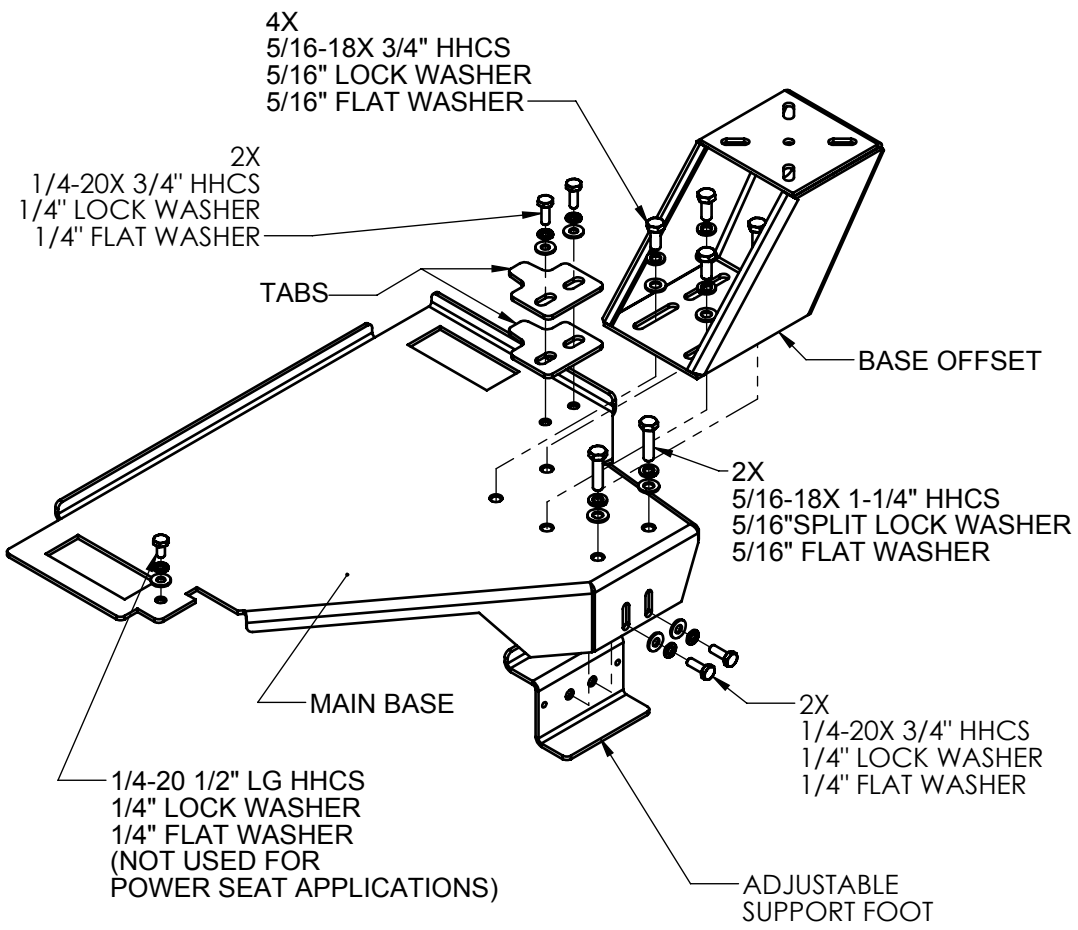

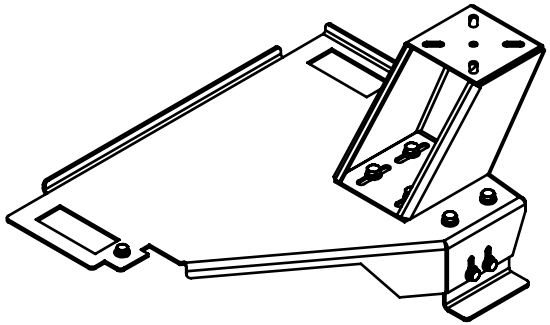

Installation Instructions

1. ATTACH SUPPORT FOOT TO MAIN BASE USING (2X) 1/4-20 X 3/4" HEX HEAD CAP SCREWS, LOCK WASHERS AND FLAT WASHERS.
2. ADJUST SUPPORT FOOT TO ITS HIGHEST POSITION, AND LIGHTLY SECURE IT.
3. INSTALL (2X) 5/16-18 X 1-1/4" HHCS, LOCK WASHERS AND FLAT WASHERS INTO THE THREADED HOLES ON THE MAIN BASE PLATE. DO NOT TIGHTEN.
4. REMOVE TRIM AROUND PASSENGER SEAT.
5. REMOVE PASSENGER SIDE REAR SEAT BOLTS.
6. MANEUVER FRONT SEAT HOOKS OUT OF CORRESPONDING RECTANGULAR FLOOR HOLES.
7. POSITION MAIN BASE INTO THE VEHICLE, LARGE RECTANGULAR HOLES SHOULD LINE UP WITH SEAT HOOK HOLES.
8. PUT THE PASSENGER SIDE SEAT BACK INTO PLACE POSITIONING THE FRONT SEAT HOOKS FIRST. IT MAY BE NECESSARY TO POSITION THE PLATE AS FAR TO THE REAR AS POSSIBLE TO ALLOW THE SEAT TO BE EASILY TILTED FOR INSTALLATION.
9. REPLACE REAR SEAT BOLTS AND FINGER TIGHTEN.
10. IF THE BASE WAS SHIFTED TO THE REAR TO INSTALL THE SEAT, PULL IT AS FAR FORWARD AS POSSIBLE.
11. IN NON-POWER SEAT APPLICATIONS, THE SINGLE THREADED HOLE ON THE OUTBOARD EDGE OF THE PLATE SHOULD LINE UP WITH A HOLE IN THE SEAT RAIL.
12. IF APPLICABLE, INSTALL THE 1/4-20 X 1/2" HHCS, LOCK WASHER AND FLAT WASHER THROUGH THE SEAT RAIL INTO THE THREADED HOLE AND TIGHTEN.
13. SLIDE TWO TABS INTO THE DRIVERS SIDE SEAT RAIL AND SECURE WITH (2X) 1/4-20 X 3/4" HHCS, LOCK WASHERS AND FLAT WASHERS.
14. ATTACH BASE OFFSET ASSEMBLY TO BASE USING (4X) 5/16-18 3/4" HHCS, (4X) 5/16 SPLIT LOCK WASHER AND (4X) 5/16" FLAT WASHER.
15. TIGHTEN 2X 5/16-18 X 1-1/4" BOLTS TO EXTEND SUPPORT FOOT TO THE FLOORING UNTIL EITHER THE BOLTS ARE FULLY TIGHTENED OR SUFFICIENT SUPPORT FOR THE BASE HAS BEEN REACHED.

HAVIS HAVIS, INC.
75 JACKSONVILLE RD.
WARMINSTER, PA. 18974
1-800-524-9900

TITLE:
INSTALLATION, HDM BASE, 2014 SILVERADO 1500/ 2015 TAHOE

DO NOT SCALE DRAWING

SIZE	DWG. NO.	REV
A	C-HDM-176_INST	A

WEIGHT (LB): 21.87	SCALE: 1:8	SHEET 1 OF 1